

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.



Electronic Digital Safe



Batteries sold separately. To ensure security of your safe, Bunker Hill Security does NOT provide replacement keys.

REV 14c

Visit our website at: <http://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com

ITEM 62240

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright© 2006 by Harbor Freight Tools®. All rights reserved.
No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠ WARNING

**Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.**

Specifications

Overall Dimensions	9" L x 6-3/4" W x 6-5/8" H
Batteries	4 - AA (sold separately)

IMPORTANT SAFETY INFORMATION

Installation Precautions

1. Verify that installation surface has no hidden utility lines before drilling or driving screws.
2. Wear ANSI-approved safety goggles during installation.
3. Mount securely before use.
4. Install only according to these instructions. Improper installation can create hazards.
5. Keep installation area clean and well lit.
6. Keep bystanders out of the area during installation.
7. Do not install when tired or when under the influence of alcohol, drugs or medication.
8. Place the Safe on correct surface. Only use this Safe on a stable, level, clean and dry surface that is capable of sustaining the load.

Use Precautions

1. **Keep closed and locked whenever unattended. RISK OF CHILD ENTRAPMENT AND SUFFOCATION. Check inside before closing. Do not allow children to play with or near safe. Keep keys and codes away from children.**
 2. Keep clear of door when closing.
 3. Position batteries in proper polarity and do not install batteries of different types, charge levels, or capacities together.
 4. Use as intended only.
 5. Inspect before every use; do not use if parts are loose or damaged.
 6. Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
 7. Do not store Keys inside of the Safe. **Place the emergency keys in a location outside of the safe making sure they are in a secure location that you can find.**
 8. Warning: The brass components of this product contain lead, a chemical known to the State of California to cause birth defects (or other reproductive harm). (California Health & Safety code § 25249.5, et seq.)
 9. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.
 10. The Safe is not fireproof.
- NOTE:** Harbor Freight Tools is not responsible for the loss of any property stored within this safe due to theft, fire, or any other circumstance.



Mounting the Safe

1. To mount the Safe to a wall or surface, use a drill to set the path for each Sheet Metal Screw. **Make certain that the drilling path is clear and free of obstacles such as wires, cables and electrical lines.**
2. Use wall anchors (not included) as necessary.
3. Insert the Screws (included) through each drilled hole and into a stud to secure the Safe to the desired surface.



Operation



Read the entire Important Safety Information section at the beginning of this document including all text under subheadings therein before set up or use of this product.

Opening with Code

Note: The Safe comes preset with a code of **1 5 9**

1. Press the numbers **1 5 9** on the Key Pad, then press either the **A** or **B** Key.

Note: The Yellow Light will illuminate each time a key is pressed. If it does not, open the safe with the key, see below, and replace the batteries (see Figure E).

2. Once the Green light is on:
 - a. turn the Knob clockwise, and
 - b. pull the Door open.

Note: Three wrong entries will disable the Key Pad for 20 seconds. Three additional wrong entries will disable the Key Pad for 5 minutes.

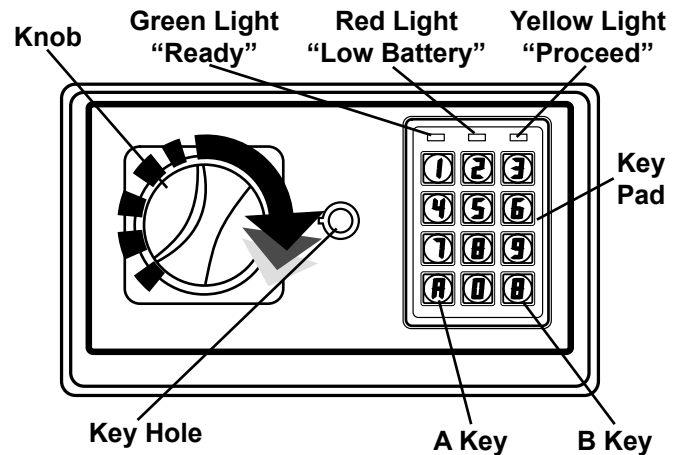


Figure A

Opening with Key

Note: The Manual Override Key is used to open the safe if you forget your PIN, if the batteries are not installed in the safe, or if the batteries are dead. Do not store keys in safe!

1. At the center of the Safe door is the Key Hole for the Override Key, covered by a Keyhole Guard. Remove the Keyhole Guard.
2. Insert Override Key into the lock and turn counterclockwise. Then:
 - a. turn the Knob clockwise, and
 - b. pull the Door open.

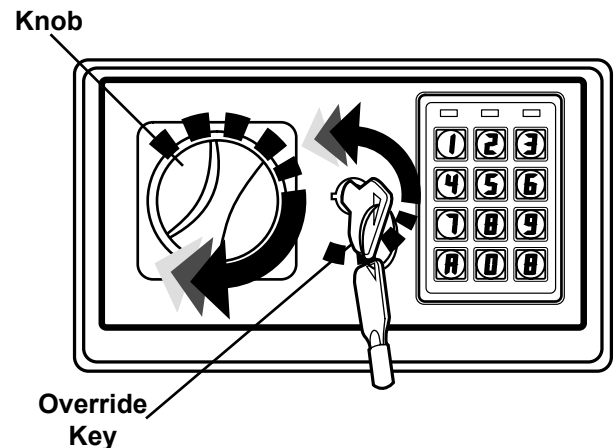


Figure B

Changing the Code

Note: The Safe comes preset with a code of **1 5 9**

1. Follow the instructions for opening the Safe to open the door.
2. Make sure that the Override Key is available before changing the code.
3. Keep door open during the entire procedure of changing the code.
On the inside of the Door near the hinge, there is the small, red, Code Reset Button.

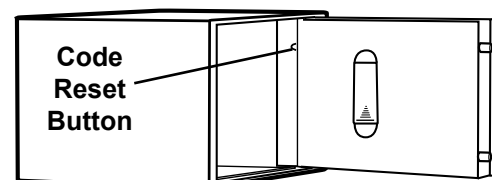


Figure C

4. User Code:
 - a. Press the Code Reset Button until the Yellow Light on the Front Control Panel lights up.
 - b. Input your new Code (3 to 8 digits) into the Key Pad, followed by the **A** or **B** Key. A beep will sound for every digit entered.
 - c. The green light will go on to confirm that the Code has been changed.

Important: The knob on the door must be turned within 5 seconds of the green light coming on, or the code will be rejected, and must be entered again.

5. With the door still open, test the new code.
 - a. First extend the door lock latch to the locked position by turning the Knob counterclockwise.

- b. Once the latch is in the locked position, use the new Code to open the latch and ensure that it works.

Note: If desired, make a note of the new Code and store it in a safe place.

Closing


⚠ WARNING

Keep closed and locked whenever unattended.

Check inside before closing.

Do not allow children to play with or near safe. Keep keys and codes away from children.

1. Close the door and turn the Knob counterclockwise.
2. Pull on the door to make certain it is properly locked.

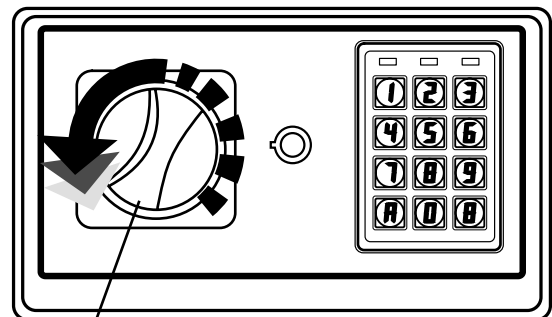

Knob

Figure D




Maintenance

1. Protect the Safe from moist or wet conditions. Moisture may cause electronic damage in the keypad or corrosion of the steel.
2. Occasionally wipe the safe and keypad clean with a soft dry cloth or brush.
3. Occasionally apply a small amount of light oil or lock lubricant to the mechanical lock mechanism. Be careful not to get any oil or other liquids on or near the electronic mechanism.




Replacing the Batteries

1. If the Red Light illuminates, the Batteries need to be changed.
2. Follow the instructions for opening the Safe.

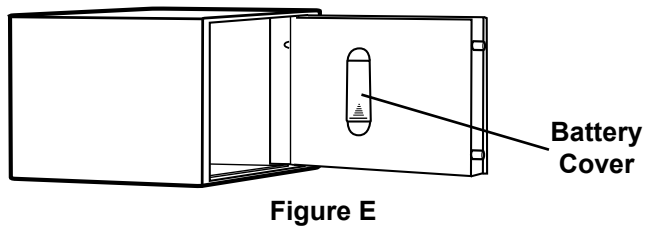

3. The Battery Compartment is located on the inside of the Door. Unsnap the Battery Cover from the Battery Compartment.
4. Remove used batteries. Dispose of them properly or recycle them.

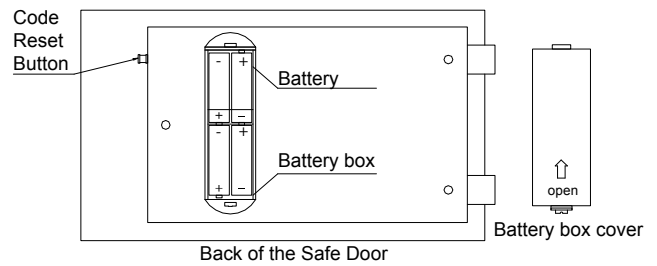

5. Insert four new "AA" Batteries in their place. Position batteries in proper polarity and do not install batteries of different types, charge levels, or capacities together.
6. Reinstall battery cover by placing it low against the Battery Compartment and snapping it into place.
7. After changing the batteries, test the Code and change it as needed before closing the Door.



Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Record Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Replacement parts are not available for this item.



3491 Mission Oaks Blvd. • PO Box 6009 • Camarillo, CA 93011 • 1-888-866-5797